


Test Flow Chart

1. For Pb, Cd, Hg, Cr⁶⁺

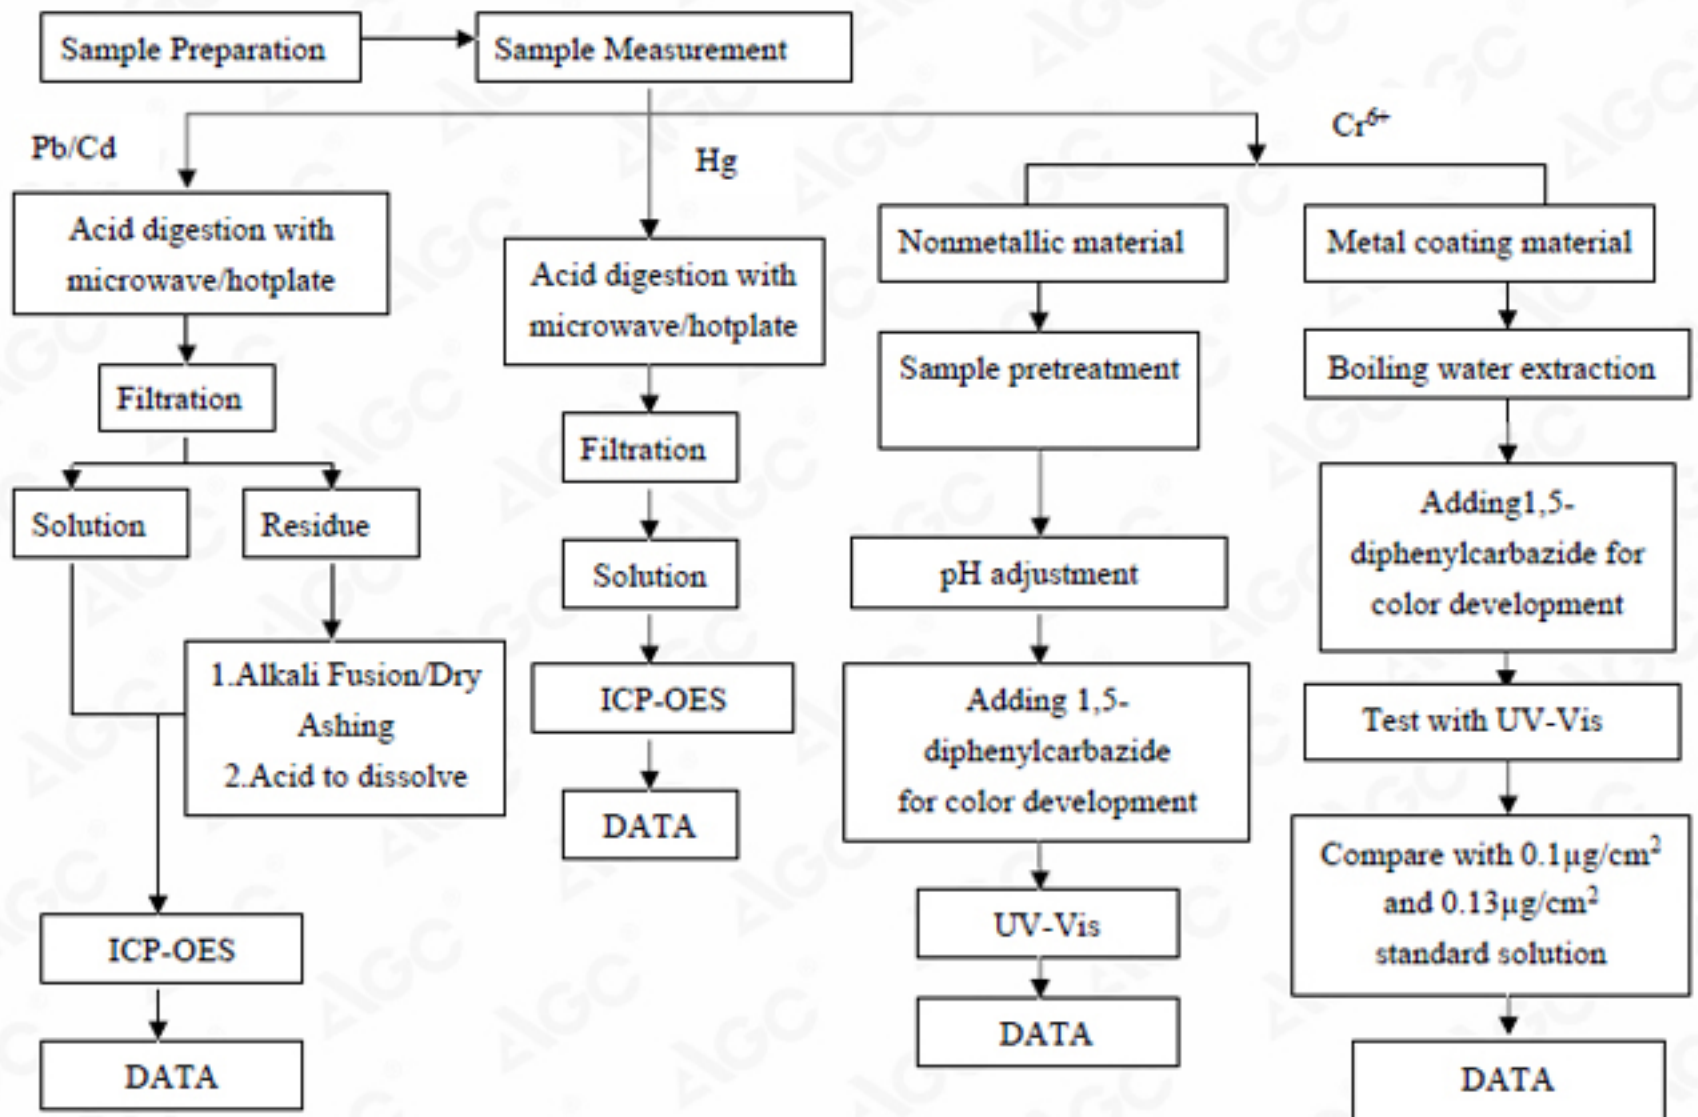

These sample were dissolved totally by pre-conditioning method according to above flow chart (Cr⁶⁺ test method excluded)

2. For PBBs, PBDEs, DBP, BBP, DEHP, DIBP

